


# EBI's Bio Filter 3 with UV-C light

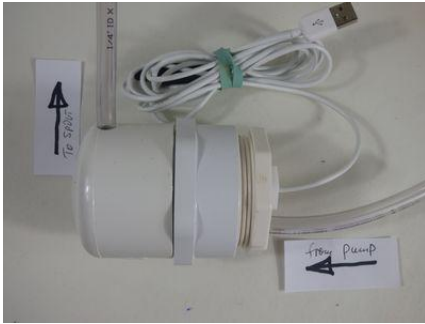


This is how your filter setting should look.



The black foam holds the carbon in place and eliminates carbon dust buildup. It also prevents the carbon pellets from flowing back to the pump or washing through the spout into the drinking area. The foam pads have cut-outs. They need to be where the tube enters the filter housing. Ignoring this could lead to reduced water flow.

To prepare or clean the filter, remove the black foam pads from the housing and cap.

**Always turn off the UV light before opening the filter housing!!**

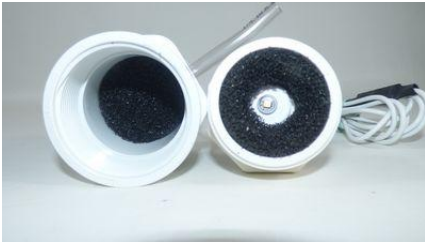

Replace them after cleaning as shown in the pictures below.



With your foam pads and tubing in place, fill the filter housing with 40 to 50 cc (approximately 1/6 cup) of activated carbon pellets. Rinse the carbon before filling your filter to remove possible dust.

If you haven't connected the tubing yet, do it now. Next, place the filter and pump into the fountain bowl, then connect the tube from the filter housing to the fountain lid, and connect the UV light to its power supply.



Questions? Feel free to ask us at [ebi@ebifountains.com](mailto:ebi@ebifountains.com)

The low-voltage germicidal ultraviolet lamp emits light lethal to microorganisms. Approximately 95% of the ultraviolet energy emitted is around 270 to 280 nanometers. This wavelength is in the region of maximum germicidal effectiveness and is highly lethal to viruses, bacteria, and mold spores. As a result, the microorganisms that pass through the filter housing are deactivated, preventing them from reproducing and rendering them harmless.



**Ultraviolet Source**  
**Eye and Skin Hazard**

**DO NOT OPEN FILTER WHEN UV (BLUE)  
LIGHTS ARE ON**

UNIVERSITY OF WASHINGTON ENVIRONMENTAL HEALTH AND SAFETY RADIATION SAFETY (206) 543-0463